

HP FlexibleLOM for Blades Installation Instructions

HP BladeSystem c-Class



Warnings and cautions


- WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
- CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Be sure that you are properly grounded (earthed) before beginning any installation procedure.

Removing the access panel


1. Power down the server blade.
2. Remove the server blade.
3. Press the access panel release button, and then slide the access panel to the rear.
4. Remove the access panel.

Installing the FlexibleLOM


1. Press the release button, and then open the mezzanine assembly latch.

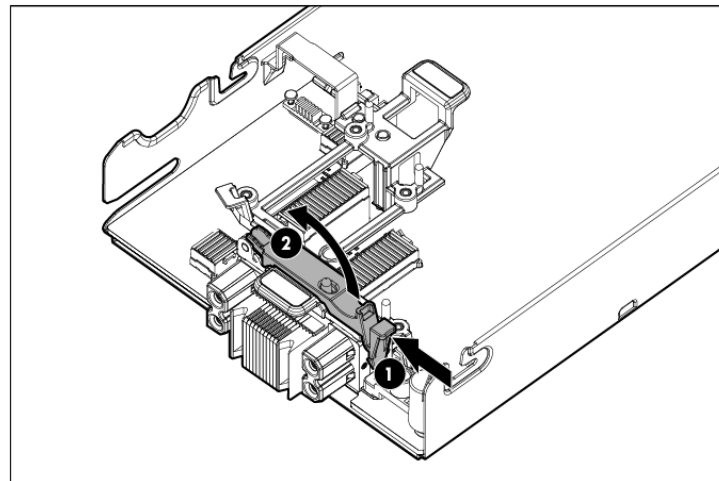


2. Lift the mezzanine assembly handles to remove the assembly and any mezzanine card from the server.

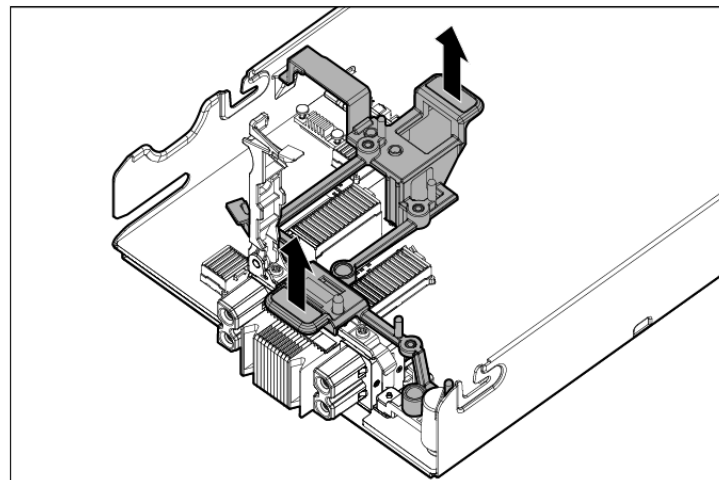

3. Align the FlexibleLOM connectors with the system board connectors, and then install the FlexibleLOM using the handle.

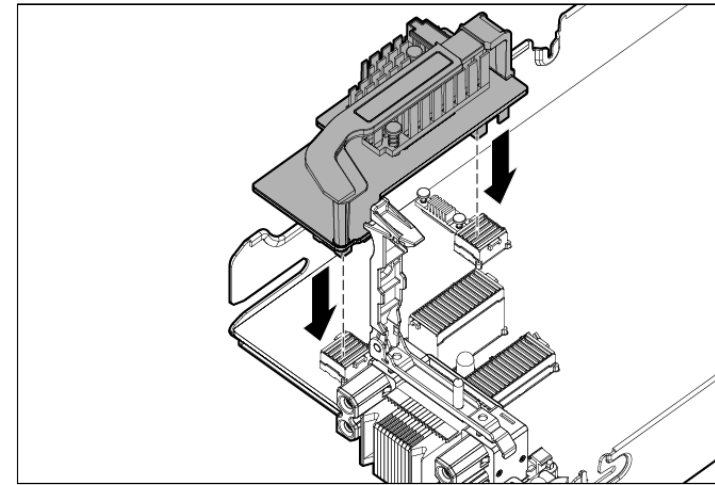

4. Align the mezzanine assembly with the guide pins on the system board, and then install the mezzanine assembly on the system board.
5. Press down firmly on the mezzanine assembly handles and any mezzanine card, and then close the mezzanine assembly latch.

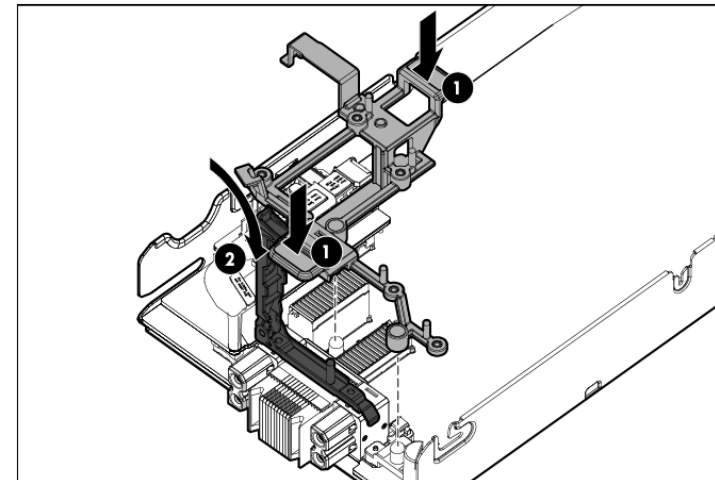

6. Install the access panel.
For more information on the association between the mezzanine bay and the interconnect bays, see the *HP BladeSystem Enclosure Setup and Installation Guide*.
7. Restore the server blade to the operating position in the server blade enclosure.
Depending on the server configuration, the server might power up automatically after being installed in the enclosure.

Completing the installation

For information about installing and configuring drivers for your specific operating system and FlexibleLOM, see the HP website (<http://www.hp.com/go/bladesystem/mezzanines>).

Getting help

For additional help, contact your HP reseller or (in North America only) call Technical Support at 1 800 652 6672 or go to the HP website (<http://www.hp.com>).

Safety and regulatory compliance

For safety, environmental, and regulatory information, see *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at the HP website (<http://www.hp.com/support/Safety-Compliance-EnterpriseProducts>).

BSMI notice

警告使用者：

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Chinese notice

Class A equipment

声明
此为 A 级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对干扰采取可行的措施。

European Union regulatory notice



Products bearing the CE marking comply with one or more of the following EU Directives, as may be applicable:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC
- Ecodesign Directive 2009/125/EC, where applicable
- R&TTE Directive 1999/5/EC
- RoHS Directive 2011/65/EU

Compliance with these directives is assessed using applicable European Harmonised Standards.

The full Declaration of Conformity can be found at the following HP website (<http://www.hp.eu/certificates>). At the website, search with the product model name or its Regulatory Model Number (RMN), which may be found on the regulatory label.

The point of contact for regulatory matters is Hewlett-Packard GmbH, Dept./MS: HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, GERMANY.

Korean class A notice

| | |
|-----------------------|---|
| A급 기기 (업무용 방송통신기기) | 이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다. |
|-----------------------|---|

Documentation feedback

HP is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (<mailto:docsfeedback@hp.com>). Include the document title and part number, version number, or the URL when submitting your feedback.

© Copyright 2011, 2013 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part Number: 659740-404
October 2013
Edition: 4



659740-404

ブレードサーバー用 HP FlexibleLOM インストール手順

HP BladeSystem c-Class



© Copyright 2011, 2013 Hewlett-Packard Development Company, L.P.

本書の内容は、将来予告なしに変更されることがあります。HP製品およびサービスに対する保証については、当該製品およびサービスの保証規定書に記載されています。本書のいかなる内容も、新たな保証を追加するものではありません。本書の内容につきましては万全を期しておりますが、本書中の技術的あるいは校正上の誤り、脱落に対して、責任を負いかねますのでご了承ください。

本製品は、日本国内で使用するための仕様になっており、日本国外で 사용되는場合は、仕様の変更を必要とすることがあります。

本書に掲載されている製品情報には、日本国内で販売されていないものも含まれている場合があります。

製品番号：659740-404
2013年10月
版数：4

警告および注意事項


- 警告**：表面が熱くなっているため、やけどをしないように、ドライブやシステムの内部部品が十分に冷めてから手を触れてください。
- 注意**：静電気放電（ESD）によって電子部品が損傷する場合があります。取り付けを始める前に、正しくアースされていることを確認してください。

アクセスパネルの取り外し


- サーバーブレードの電源を切ります。
- サーバーブレードを取り外します。
- アクセスパネルのリリースボタンを押して、アクセスパネルを背面側へスライドさせます。
- アクセスパネルを取り外します。

FlexibleLOMの取り付け


- リリースボタンを押して、メザニアアセンブリのラッチを開きます。

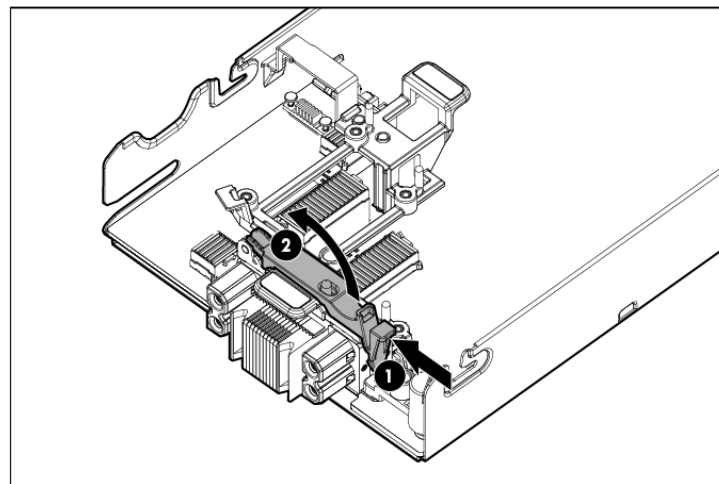


- メザニアアセンブリのハンドルを持ち上げて、アセンブリおよびすべてのメザニンカードをサーバーから取り外します。

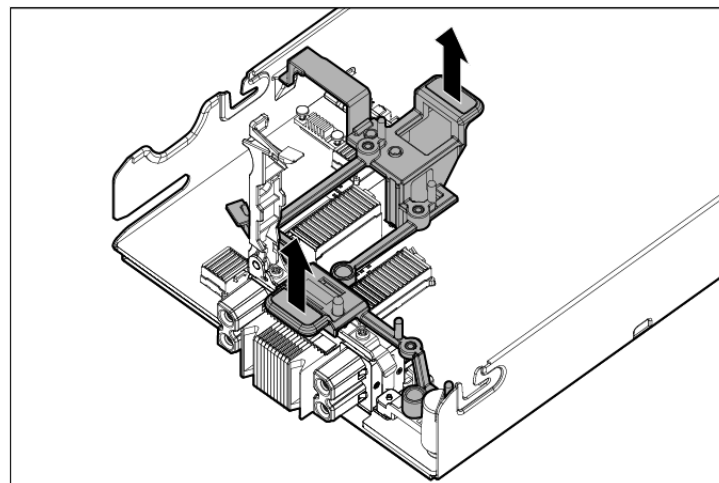

- FlexibleLOMコネクタをシステムボードのコネクタに合わせて、ハンドルを使用してFlexibleLOMを取り付けます。

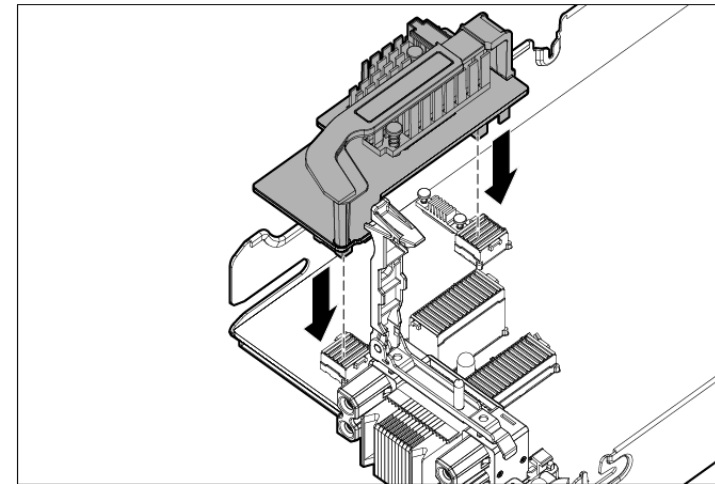

- メザニアアセンブリをシステムボード上のガイドピンに合わせて、メザニアアセンブリをシステムボードに取り付けます。
- メザニアアセンブリのハンドルおよびすべてのメザニンカードをしっかりと押し下げて、メザニアアセンブリのラッチを閉じます。

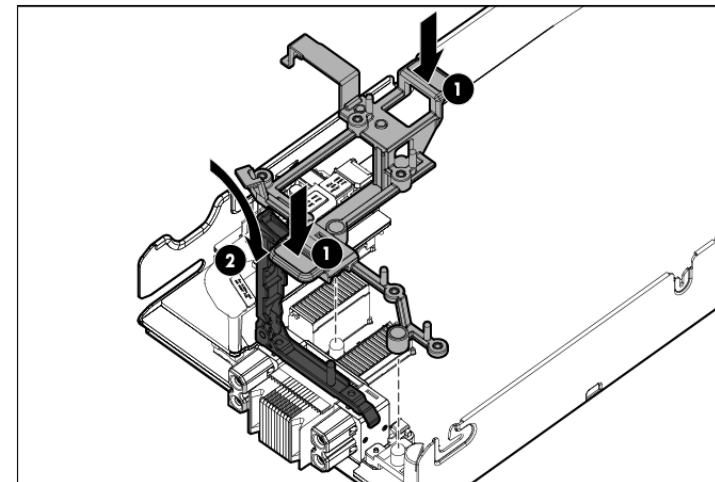

- アクセスパネルを取り付けます。
メザニンベイとインターコネクタベイの関連について詳しくは、HP BladeSystemエンクロージャーのセットアップ/インストレーションガイドを参照してください。
- サーバーブレードをサーバーブレードエンクロージャーの動作位置に戻します。
サーバーの構成によっては、サーバーは、エンクロージャーに取り付けた後に自動的に電源が入る可能性があります。

取り付けの完了

ご使用のオペレーティングシステムおよびFlexibleLOM用のドライバーのインストールと設定については、HPのWebサイト<http://www.hp.com/go/bladesystem/mezzanines>（英語）を参照してください。

追加情報の入手先

その他の参照情報については、HP製品販売店またはHPのサービス窓口にお問い合わせになるか、HPのWebサイト<http://www.hp.com/jp>を参照してください。

安全と規定準拠

安全、環境、および規定に関する情報については、『Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products』（HPのWebサイト<http://www.hp.com/support/Safety-Compliance-EnterpriseProducts>（英語））を参照してください。

BSMI notice

警告使用者：

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Chinese notice

Class A equipment

声明
此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对干扰采取可行的措施。

European Union regulatory notice



Products bearing the CE marking comply with one or more of the following EU Directives, as may be applicable:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC
- Ecodesign Directive 2009/125/EC, where applicable
- R&TTE Directive 1999/5/EC
- RoHS Directive 2011/65/EU

Compliance with these directives is assessed using applicable European Harmonised Standards.

The full Declaration of Conformity can be found at the following HP website (<http://www.hp.eu/certificates>). At the website, search with the product model name or its Regulatory Model Number (RMN), which may be found on the regulatory label.

The point of contact for regulatory matters is Hewlett-Packard GmbH, Dept./MS: HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, GERMANY.

Korean class A notice

| | |
|-----------------------|---|
| A급 기기 (업무용 방송통신기기) | 이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다. |
|-----------------------|---|